

# Installation Instructions

 
# TELEHOOK

WALL TILT


## Important Notes

- The Telehook TH-32-60-UTM supports LCD and Plasma Flat Panel Displays from 32" (81cm) to 63" (160cm) and supports a maximum load of 91kgs (200lbs).
- This product suits displays with mounting hole patterns from 180mm to 740mm wide (7"-29") by 100mm to 500mm high (4"-20").
- The manufacturer does not accept responsibility for incorrect installation.


## Component Checklist



Wall Plate

 

Display Bracket (left)

 

Display Bracket (right)

### TOOLS REQUIRED:

- Power Drill
- 12mm (1/2) or 8mm (5/16) Drill Bit
- Phillips Head Screw Driver
- Spirit Level
- 17mm (1 1/16") Socket Wrench or Shifter

 


Security Bracket (right)



Security Bracket (left)

### Bits Bag



Coach Screw (x4)



Washer (x4)



Masonry Wall Plug (x4)



Multi Washer (x4)




Recessed Hole Bush (x4)



Spacer Bush (x4)

### Mounting Screws

 

Cross Recessed Screws


- M8x15mm / M8x35mm / M8x45mm (x4 each)
- M6x15mm / M6x35mm / M6x45mm (x4 each)
- M5x15mm / M5x35mm / M5x45mm (x4 each)
- M4x15mm / M4x35mm / M4x45mm (x4 each)

## A Mounting the Wall Plate

### Masonry Wall

**Note:** Ensure the Wall Plate is mounted with the folded tabs pointing upwards.


**TIP:** Use a spirit level to ensure that the wall plate is horizontal

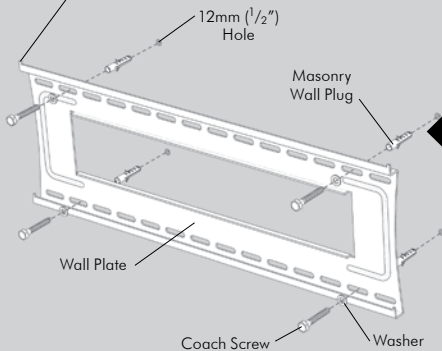

### Timber Stud Wall


**Note:** Ensure the Wall Plate is mounted with the folded tabs pointing upwards.

**TIP:** Use a spirit level to ensure that the wall plate is horizontal

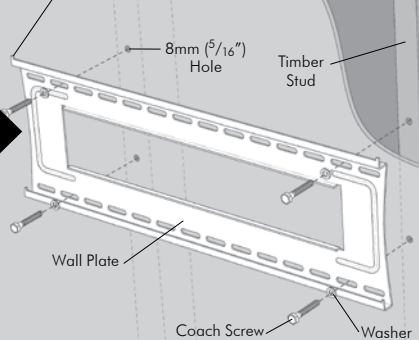


OR

## B Mounting the Display Brackets

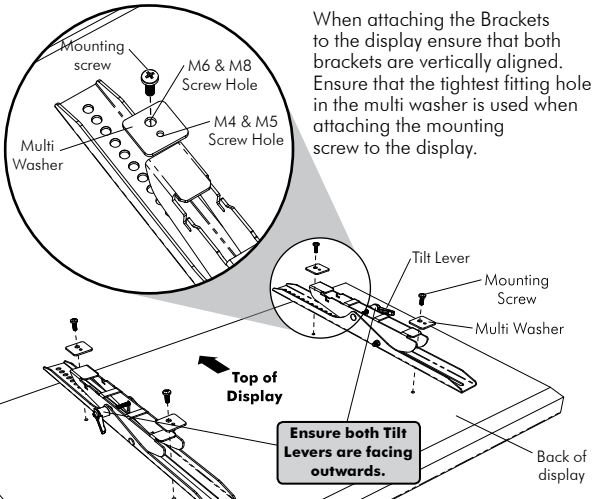

### Recessed Mounting Holes


If the mounting holes are recessed into the back of the display, use the supplied Recessed Hole Bushes to pack the recessed hole. If the brackets require further clearance from the display, attach the Spacer Bushes. Ensure the brackets are securely fixed to the display.

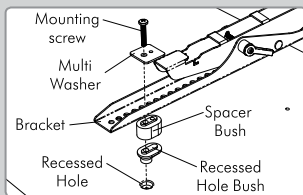

## C Attaching the display to the wall plate



**Note: This procedure will require two persons**

With the brackets attached to the display, lift the display and hook the brackets onto the Wall Plate as shown.

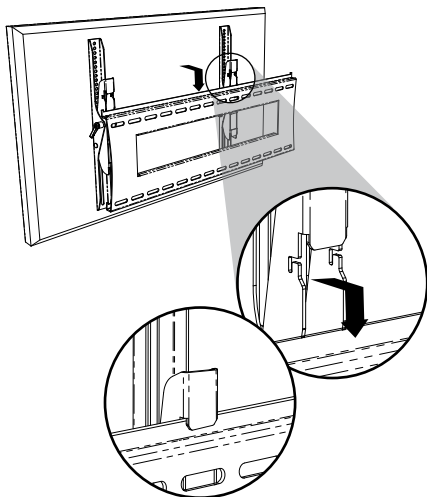


**Note: For demonstration purposes, the wall has been omitted from the above images.**

## D Adjusting Tilt

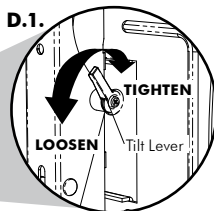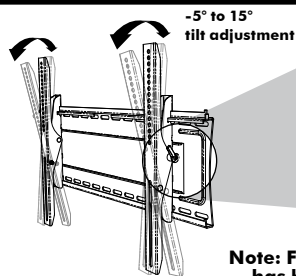


To adjust the angle of the display, loosen the Tilt Lever located on each bracket then adjust to desired angle. Once in position, tighten each lever firmly.

To adjust the Tilt Lever position without tightening or loosening the lever, pull the lever as shown to dis-engage the ratchet mechanism and rotate the lever into the desired position.


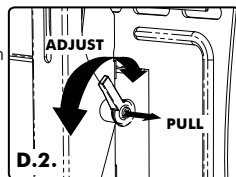


**Note: For demonstration purposes, the display has been omitted from the above images.**

## E Security Option

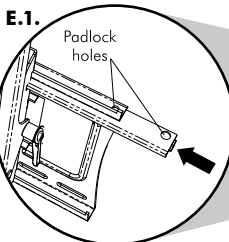

**Note: For demonstration purposes, the display has been omitted from the images below.**

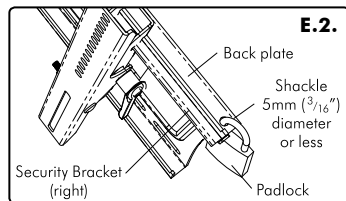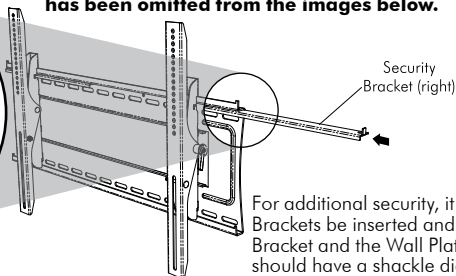

For additional security, it is suggested that the left and right Security Brackets be inserted and a Padlock attached through each Security Bracket and the Wall Plate as shown. The two Padlocks (not supplied) should have a shackle diameter no larger than 5mm ( $\frac{3}{16}$ " )

