



Advanced Security Installation Addendum

SPACEDEC

DISPLAY


POS Multi & POS Multi Back to Back

A Purchase M4 Fastener's


Using the M4 Security Holes, your POS Multi can be secured from beneath the work surface for greater security.

A.1. Determine the length of Screw you require using the formula shown, and purchase 4xM4 Screws and Washer's, with your chosen drive type.

Screw Length Formula

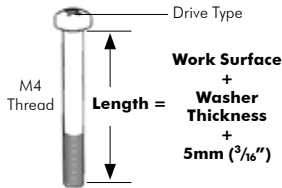

Security Holes

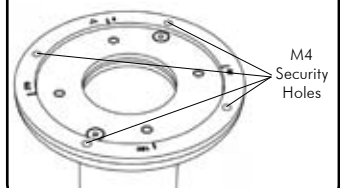

B Locate & Secure Your POS Multi

B.1. Position the Installation Template in the desired location on your work surface. Ensure the straight edge sits perpendicular with the User's line of sight. Mark the center points of each of the Security Holes, and Cable Access Hole onto the work surface with a pencil.

B.2. Drill 4 x 5mm (3/16") Holes through the work surface (**Take care to drill perpendicular to the work surface**). Use a 45mm (1 3/4") hole saw to drill the Cable Access Hole in the work surface.

B.3. Reposition POS Multi with the "Direction Arrow" pointing in the direction required for your chosen rotation. (Refer to the Mounting Options in POS Multi Installation Instructions) Secure the POS to the Desktop using the purchased M4 fastener's (x4).

NOTE: Return to POS Multi or POS Multi Back-to-Back Installation Instructions to finish Installation

